

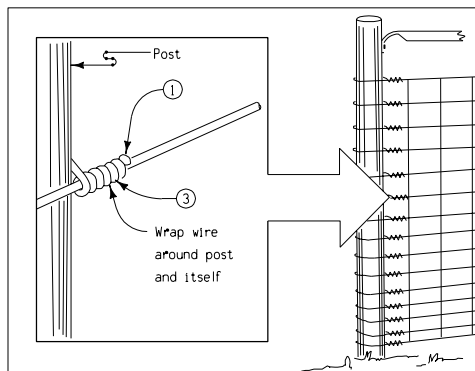
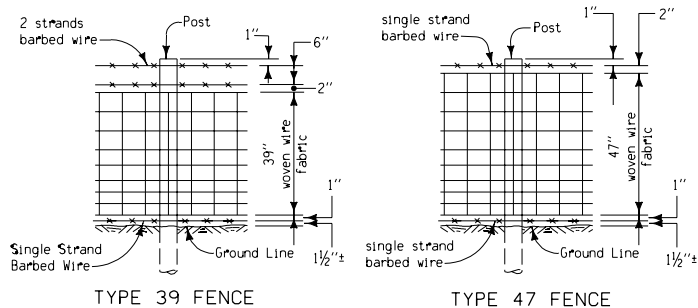
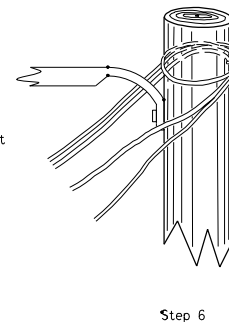
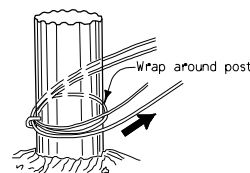
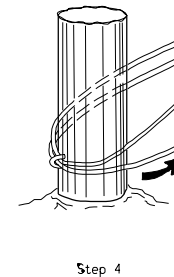
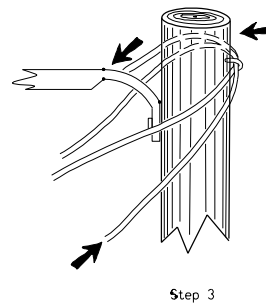


NOTE:
Fabric shall be placed on Roadway side of posts. For certain curves, stream crossings or other locations specifically directed by the Engineer, fabric may be placed on the Property side of posts.

TYPICAL PLAN OF FENCE

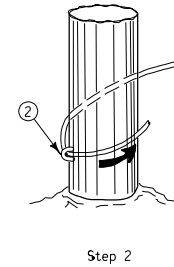


END POST WIRE WRAP

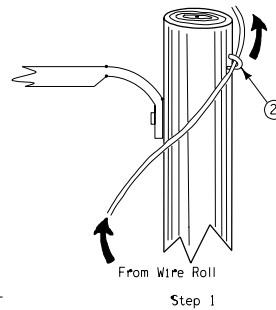

DETAILS OF BRACE WIRE INSTALLATION

NOTES:

- 1 Make a minimum of four tight wraps back around itself. Ends of the wrap to be trimmed flush.
- 2 Set staples cross-wise to the grain. Staples are to be driven tight at pull posts. All other wood post the staples shall be driven firm, but loose enough to allow lateral movement of the wire.
- 3 Approved fence fabric wire splice.
- 4 A tension curve consists of a "U" shaped crimp in the fence wires. It has the same effect as a spring. Stretch to 50% removal of the factory crimp.

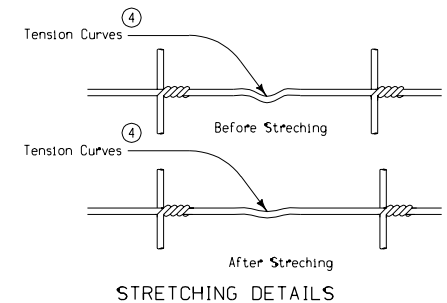

Iowa Department of Transportation
Project Development Division

STANDARD ROAD PLAN RC-8B(1)

REVISION: To clarify field fencing details.

REVISION NO. New

APPROVED BY: *James C. Chapp* 01-10-00

DESIGN METHODS ENGINEER

REVISION DATE 04-25-00

DETAILS FOR
FIELD FENCE CONSTRUCTION